
ICS4_5

Weighing terminals Compact scales

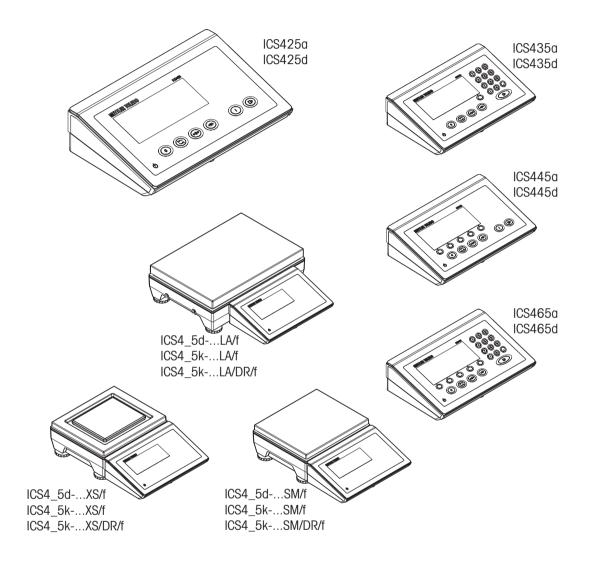



METTLER TOLEDO Service

Congratulations on choosing the quality and precision of METTLER TOLEDO. Proper use according to these instructions and regular calibration and maintenance by our factory-trained service team ensure dependable and accurate operation to protect your investment. Contact us about a ServiceXXL agreement tailored to your needs and budget.

We invite you to register your product at

www.mt.com/productregistration

so we can contact you about enhancements, updates and important notifications concerning your METTLER TOLEDO product.

METTLER TOLEDO QUICK Guide ICS4_5 Order number 22023416A 04/12

1 Documentation



In addition to this printed Quick Guide you are supplied a CD-ROM with the following contents:

- User manuals
- Data sheets
- Videos
- Brochures

2 Safety instructions



General

- ▲ Do not use the device in a hazardous environment. Special devices are available in our range of products for hazardous environments.
- ▲ The safety of the device cannot be ensured if it is not operated in accordance with these operating instructions.
- ▲ Only authorised personnel may open the device.



Devices with protection level IP65

Devices with protection level IP65 are dust-tight and protected from water jets according to EN 60529. They are suitable for use in dusty environment and brief contact with liquids.

- ▲ Ensure that the device is dried off again after coming into contact with liquid.
- ▲ Do not use the device in environments with a risk of corrosion.
- ▲ Do not flood the device or submerge it in liquid.



Devices with built-in power supply unit

- ▲ Ensure that the power socket outlet for the device is earthed and easily accessible, so that it can be de-energised rapidly in emergencies.
- Ensure that the supply voltage at the installation site lies within the range of 100 V to 240 V.
- ▲ Check the power cable regularly for damage. If it is damaged, immediately disconnect the device from the power supply unit.



Devices with built-in storage battery

- Only use storage batteries from the manufacturer.
- Do not use the battery charger in humid or dusty rooms or below 0 °C (32 °F) ambient temperature.
- ▲ After the storage battery has been charged, the cover cap of the charging socket at the device must be closed.



Compact scales

Avoid falling loads, shock loads as well as impacts from the side.

04/12 Order number 22023416A METTLER TOLEDO Quick Guide ICS4_5

3 Operation

The following illustrations are arranged in two columns:

- left side state of the scale or keystroke
- right side corresponding display

3.1 Switching on/off







()

0.000 kg

Switching off




0.000 kg

DEF



Press and hold the key until OFF is displayed.

3.2 Zeroing




0.003 kg

 Ω . $\Omega\Omega\Omega$ kg

Zeroing corrects the influence of slight changes on the load plate or minor deviations from the zero point.


3.3 Straight weighing

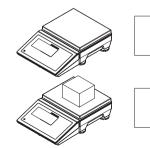

1.838 kg

0.000 kg


3.4 Taring

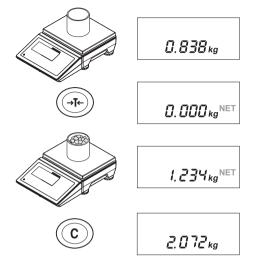


When the scale is tared, the NET symbol is displayed.

When the tare is cleared, the gross weight is displayed.

3.5 Printing or transferring data

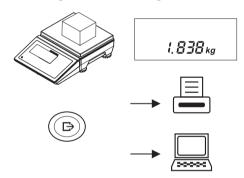

3.6 Switching weight unit

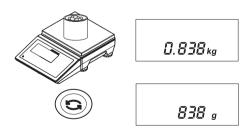

04/12 Order number 22023416A METTLER TOLEDO Quick Guide ICS4_5

4 Cleaning



Risk of electric shock

- ▲ Before cleaning, unplug the power plug in order to disconnect the terminal from the power supply.
- ▲ Cover open connectors with protective caps.
- Clean the protective cover separately. The protective cover is dishwasher-safe.
- Take off the load plate and remove any dirt and foreign substances which may have collected underneath. Do not use any hard objects to do so.
- Do not disassemble the weighing device.
- Remove any possibly remaining detergent by rinsing with clear water.
- Observe all the existing regulations on cleaning intervals and permissible cleaning agents.

Cleaning of other weighing platforms than described in this user manual

→ Make sure to observe the cleaning instructions for the connected weighing platform. The weighing platform may not be designed for the environments and cleaning procedures described above.

5 Disposal



In conformance with the European Directive 2002/96 EC on Waste Electrical and Electronic Equipment (WEEE), this device may not be disposed of with domestic waste. This also applies to countries outside the EU, according to their specific requirements.


Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment.

If you have any questions, please contact the responsible authority or the distributor from which you purchased this device.

Should this device be passed on to other parties (for private or professional use), the content of this regulation must also be related.

Thank you for your contribution to environmental protection.

METTLER TOLEDO Quick Guide ICS4_5 Order number 22023416A 04/12

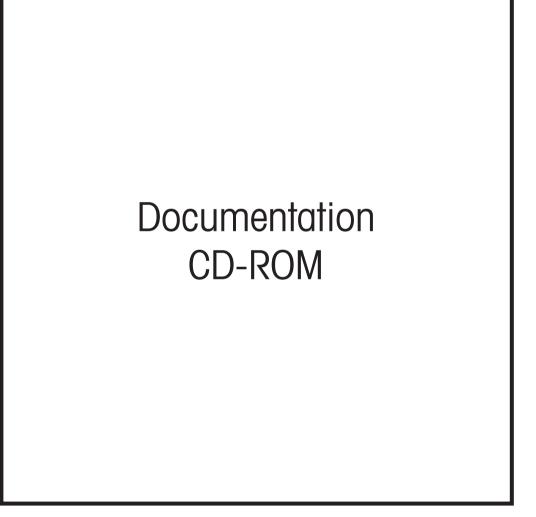

04/12 Order number 22023416A METTLER TOLEDO Quick Guide ICS4_5 7

To protect your METTLER TOLEDO product's future:

METTLER TOLEDO Service XXL assures the quality, measuring accuracy and preservation of value of all METTLER TOLEDO products for years to come.

Please send for full details about our attractive terms of service.
Thank you.

www.mt.com/service

For more information

Mettler-Toledo (Albstadt) GmbH

D-72458 Albstadt

Tel. +49 7431-14 0 Fax +49 7431-14 232

Subject to technical changes © 04/2012 Mettler-Toledo (Albstadt) GmbH Printed in Germany Order number 22023416A

